




C-Clamp Encoder


User Manual

Phoenix Inspection Systems Limited, Dalton House, 40 Hardwick Grange, Warrington, WA1 4RF, United Kingdom
t: +44 (0) 1925 826000 | f: +44 (0) 1925 838788 | e: sales@phoenixisl.co.uk | www.phoenixisl.co.uk
Company Registered in England No. 1718157 VAT No. 374 1322 70


Innovators in NDT Technology

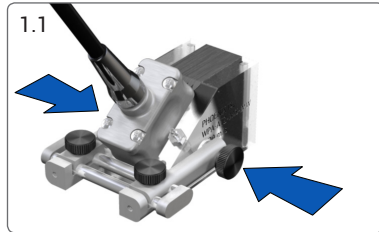


1.1 Slide the arms in to fit the wedge

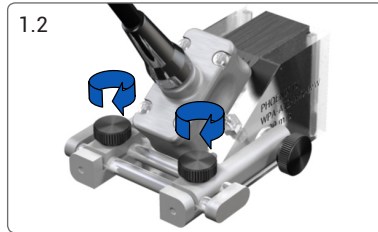

1.2 Tighten the two screws to fix the arms in position

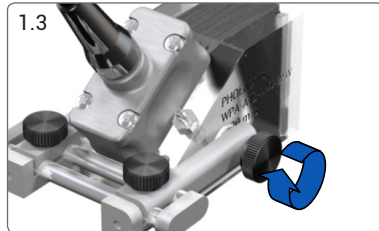


1.3 Tighten the clamping screw until the wedge is held rigidly

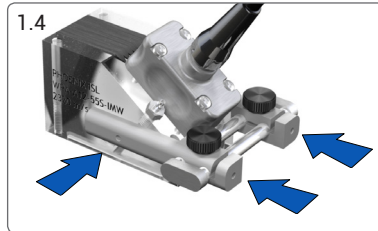


1.4 There are three encoder mounting positions; Two rear mounting and one side mounting

Rear Mounting

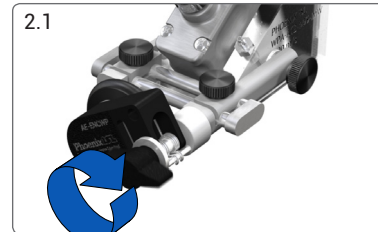


2.1 Screw on the encoder and set the spring tension

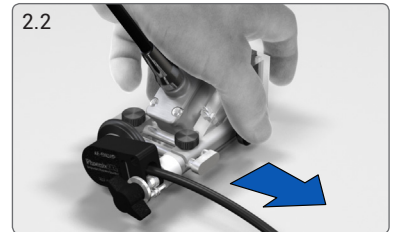


2.2 Scan left or right with the encoder mounted on the back

Side Mounting

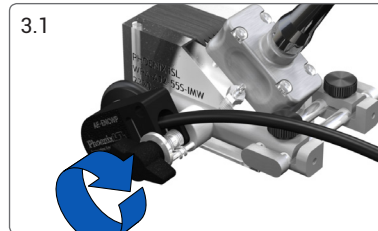

3.1 Screw on the encoder and set the spring tension

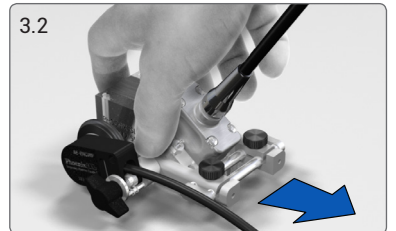

3.2 Scan forwards or backwards with the encoder mounted on the side